


# MATERIAL SPECIFICATION & INSTALLATION GUIDE

## PRODUCT ITEM CODE & DESCRIPTION:


### ML 992 AS, CL & 993 CL ~ FOLDING SHOWER SEATS




**ML 992 AS**

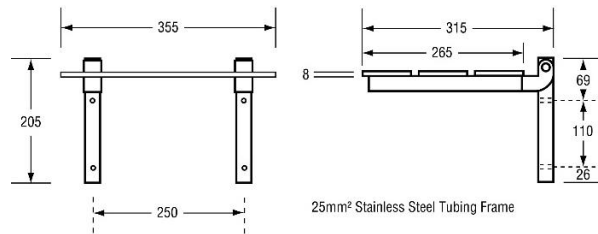

**ML 992 CL**

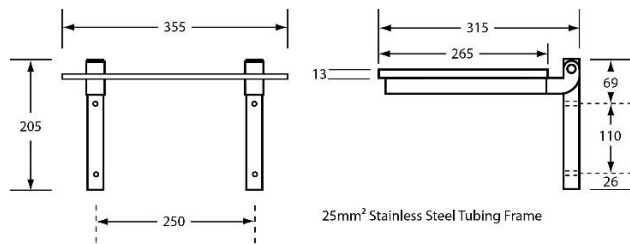

**ML 993 CL**

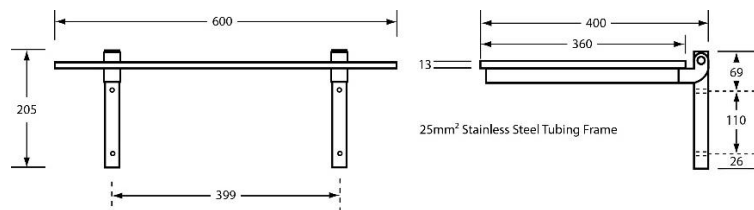

## MATERIAL SPECIFICATIONS:

#304 Grade Stainless Steel 25mm $\varnothing$  Tubing, #4 Finish / Wall Mount Leg Bracket 16 Gauge Stainless Steel / 13mm Thick, High-Impact Aluminium Powder Coated Slat Seat or Compact Laminate Single Piece Seat

## DIMENSIONS:

As noted per each product above

## INSTALLATION GUIDE:

These units are to be surface mounted and are subject to Australian Building Code Regulations for height location and fitment.

Anchors are not included with the units and are the responsibility of the installation contractor, as is the compliance re fitment of internal wall blocking, such as noggins for anchoring the relevant unit via appropriate hardware.

1. After determining appropriate height/location in shower cubicle area, place a small amount of "wet area" rated silicone sealant to rear of unit flanges/guide bracket and fixing hardware interface to inhibit water ingress into fixing area.
2. Fasten unit Wall Mount Leg Bracket and/or guide bracket to concealed anchor/noggins with appropriate hardware and test action for smoothness, ease of operation. Clean off any excess silicone and leave to cure/set for at least 24 hours before use.

*These units should only be installed by a competent tradesperson and Metlam Australia takes no responsibility for any damage to walls or fixtures due to incorrect installation.*